

Ronin RavenEye Image Transmission System compatible list

Brand	Model	Multi-Camera Control Cable Cable	HDMI Cable	Notes	Camera Firmware Version
Canon	1DX3	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.1.0
	1DX2	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.1.6
	EOS R6	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable	1. When the camera is in the video mode, set the HDMI display as camera + HDMI, and the camera screen and HDMI can be displayed normally. 2. When the camera is in the photo mode, there is no HDMI display setting in the setting options, the camera screen does not display pictures, and the HDMI output is normal.	v1.0.0
	EOS R5	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable	1. When the camera is in the video mode, set the HDMI display as camera + HDMI, and the camera screen and HDMI can be displayed normally. 2. When the camera is in the photo mode, there is no HDMI display setting in the setting options, the camera screen does not display pictures, and the HDMI output is normal.	v1.0.0
	EOS R	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.6.0
	EOS RP	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.4.0
	G7X3	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.2
	EOS M50	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.0.2
	EOS 90D	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0
	EOS 5D4	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable	1. In the video mode, the camera's HDMI display is set to screen + camera display, the camera and HDMI output can display the preview screen at the same time, and the camera screen does not display the preview screen in the photo mode	v1.2.1
	EOS 200D II	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.0
	EOS 77D	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		/
	EOS 800D	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.1
	EOS 6D II	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.4
	EOS 80D	Multi-Camera Control Cable (Mini-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0.2
Sony	A7M3	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable	1. The HDMI information display needs to be set to off, the camera screen and HDMI can display images at the same time	v3.01
	A6600	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.00
	A9	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v6.0
	A6400	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.00
	A7R 4	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.10
	A7R3	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v3.10
	A7S3	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to HDMI Cable		v1.00
	A7S2	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v2.20
	A7M2	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v4.01
	A7S	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v3.20
	A7R2	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v4.00
	A6100	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.00
	A6300	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v2.01
	A6500	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.02
	PXW-Z90V	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to HDMI Cable		—
	FDR-AX100E	Multi-Camera Control Cable (Sony Multi)	Ronin Mini-HDMI to Micro-HDMI Cable		—
Nikon	Z7	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v3.0
	Z6	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v3.0
	Z50	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.0
	Z6II	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0
	Z7II	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0
	Z5	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.0
	D500	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.20
	D780	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.01

		D6	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Mini-HDMI Cable	1. Connect the HDMI cable first, then the USB-C cable, then the image transmission can be used normally	v1.00
		D5	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable		v1.30
		D850	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Mini-HDMI Cable	1. Connect the HDMI cable first, then the USB-C cable, then the image transmission can be used normally	v1.10
	FUJIFILM	X-H1	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable		v2.01
			富士Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable		
		X-T2	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable		
			富士Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable		v4.30
		X-E3	富士Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable		
			富士Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.22
		X-T20	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to Micro-HDMI Cable		v4.3
		X-T20	富士Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable		v1.0
		X-T4	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable	1. In 4K resolution, HDMI output information needs to be set to on	v1.0
			富士Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable		
		X-T3	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable		v3.10
			富士Multi-Camera Control Cable (RSS-F)	Ronin Mini-HDMI to Micro-HDMI Cable		
	Panasonic	GH5	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable	1. After connecting the image transmission, the camera screen does not display the image	v2.6
		GH5s	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable	1. After connecting the image transmission, the camera screen does not display the image	v1.2
		S1H	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable	1. After connecting the image transmission, the camera screen does not display the image	v1.1
		BGH1	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable		v1.0
		S5	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable	1. HDMI cannot be used after connecting the USB cable	v1.0
		S1	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable	1. After connecting the image transmission, the camera screen does not display the image	v1.3
		G9	Multi-Camera Control Cable (Micro-USB)	Ronin Mini-HDMI to HDMI Cable	1. After connecting the image transmission, the camera screen does not display the image	v2.0
		G95	松下Multi-Camera Control Cable (RSS-P)	Ronin Mini-HDMI to Micro-HDMI Cable		v0.2
		GH4	松下Multi-Camera Control Cable (RSS-P)	Ronin Mini-HDMI to Micro-HDMI Cable		v2.6
	BMD	BMPPCC 4K	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable		v6.6
		BMPPCC 6K	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to HDMI Cable		
	Sigma	FP	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable		v2.0
	Olympus	E-M1 II	Multi-Camera Control Cable (USB-C)	Ronin Mini-HDMI to Micro-HDMI Cable	1. To connect the image transmission, you need to set the "HDMI Control" to "Off" and the HDMI resolution to 1080p, otherwise the image output is abnormal 2. HDMI cannot be used after connecting the USB cable	v1.3
	ZCAM	E2	/	Ronin Mini-HDMI to HDMI Cable		v0.96.0